

	PNC's	PNC	Serial Number Ranges
1	900277599	900277599	05220575 - 05220874
2	900277600	Electrolux	10221617 - 10221917
3	900277601		10221316 - 10221616
4	900277602		10321918 - 10322218
5	900277603		10232406 - 10232846
6	900277604		10322219 - 10323083
7	900277605		10333874 - 10334173
8	900277606		10332847 - 10333873
9	900277607		10434174 - 10434473
10	900277614		10634474 - 10634773
11	900277616		11544137 - 11544576
12	900277617		11947507 - 11948532
13	900277689		14259595 - 14259894
14	900279101		14462163 - 14462462
15	900279102		
16	900279104	900277600	05220875 - 05221315
17	900279105	Electrolux	10230624 - 10231064
18	900279107		10631065 - 10631365
19	900279155		10431366 - 10431665
20	900279157		11131666 - 11131965
21	900402073		11131966 - 11132405
22	900402074		11131666 - 11131965
			11040701 - 11041000
		900277601	02900001 - 02900302
		Electrolux	03000001 - 03000300
			05012314 - 05012753
			05114896 - 05115195
			05216398 - 05216698
			10319973 - 10320273
			10425928 - 10426227
			11126228 - 11126527
		900277602	03600001 - 03600304
		Electrolux	05115797 - 05116096
			10330323 - 10330623
			11543837 - 11544136
		900277603	03000301 - 03000743
		Electrolux	03000001 - 03000268
			03000269 - 03000300
			03500744 - 03501043
			04501044 - 04501483
			04501484 - 04502183
			04502184 - 04502347
			04706176 - 04706617
			04705433 - 04705873
			05113716 - 05114155
			05114156 - 05114455
			05114456 - 05114895
			05115196 - 05115496
			05317602 - 05318628
		900277603	10218629 - 10219069